

## MODULE CHART

Mod #	Draw Length	Draw Weight	Drop Stop Pos.
A	26.5	-0.6	4.5
B	27	-0.3	5.5
C	27.5	PAR	6
D	28	+0.2	7
E	28.5	+0.4	8
F	29	+0.5	8.5
G	29	+0.6	8.5
H	29.5	+0.9	10
I	30	+1.3	11
J	30.5	+1.5	12 (MAX)
Adjustable to 80%+ let off			



### \*Adjust Draw Stops Correctly

Ensure that draw stops on both cams are set correctly, if they are set too far back, the misalignment may cause a lockup during draw.

### \*Draw Stop Alignment

Ensure that both cams are set to the same corresponding mark while using the leading edge as your alignment point to each mark.

### \*Alignment with Draw Stop

Remember to use the leading edge to align for your desired draw stop position.