



MODULE CHART

Mod #	Draw Length	Draw Weight	Draw Stop Pos
1	27	PAR lb	MIN
1	27.5	PAR lb	1
3	28	PAR lb	2.5
4	28.5	+1.0 lb	3
5	29	+3.0 lb	4
6	29.5	+4.0 lb	6
7	30	+5.0 lb	8

Adjustable to 80%+ let off



***Adjust Draw Stops Correctly**

Ensure that draw stops on both cams are set correctly, if they are set too far back, the misalignment may cause a lockup during draw.

***Draw Stop Alignment**

Ensure that both cams are set to the same corresponding mark while using the leading edge as your alignment point to each mark.

***Alignment with Draw Stop**

Remember to use the leading edge to align for your desired draw stop position.

