

HELLFIRE 35

MODULE CHART

Mod #	Draw weight	Holding weight	Draw Length	Draw Stop Position	Let-off
1	59	16	26.5	min	73%
1	59	11	27	1.5	81%
2	61	16	27.5	2	74%
2	61	8	28	3.5	87%
3	63	15	28.5	3.5	76%
3	63	7	29	5.5	89%
4	63	14	29.5	6.5	78%
5	59	15	29.5	7	75%
5	59	8	30	8	86%
6	65	10	30	7.5	85%
6	65	5	30.5	9	92%
7	62	15	30.5	9.5	76%
7	62	10	31	10.5	84%
8	66	13	31	10.5	80%
8	65	18	31.5	max	72%

*Adjust Draw Stops Correctly

Ensure that draw stops on both cams are set correctly, if they are set too far back, the misalignment may cause a lockup during draw.

*Draw Stop Alignment

Ensure that both cams are set to the same corresponding mark while using the leading edge as your alignment point to each mark.

*Alignment with Draw Stop

Remember to use the leading edge to align for your desired draw stop position.

