

# INFERNO 33

## MODULE CHART

Mod #	Draw Length	Draw Stop Position	Let-off
1	26 1/2	2	90%
2	27	3	79%
2	27 1/2	3.5	89%
3	28	4	83%
3	28 1/2	4.5	89%
4	28 1/2	6	71%
4	29	6.5	81%
5	29	7	78%
5	29 1/2	9.5	90%
6	29 1/2	9	86%
7	30	10	85%
7	30 1/2	MAX	92%
8	30 1/2	MAX	77%



### \*Adjust Draw Stops Correctly

Ensure that draw stops on both cams are set correctly, if they are set too far back, the misalignment may cause a lockup during draw.

### \*Draw Stop Alignment

Ensure that both cams are set to the same corresponding mark while using the leading edge as your alignment point to each mark.

### \*Alignment with Draw Stop

Remember to use the leading edge to align for your desired draw stop position.

1/2 Mark

Fullmark

Plus Side

### Leading Edge

Use this edge of draw stop to align with proper draw stop alignment mark\*

Minus Side

